

Upper End Panel Item #291244 (Silver) Item #291242 (Black)


#### INTRODUCTION:

CAREFULLY READ THE CONTENTS OF THESE INSTRUCTIONS, AS THE INSTRUCTIONS INDICATE THE CORRECT STEP BY STEP PROCEDURE TO ASSEMBLE THE PRODUCT. IN THE EVENT OF ASSEMBLY PROBLEMS OR MISSING PARTS, PLEASE CALL OUR CUSTOMER SERVICE DEPARTMENT AT 616-842-5330.

THE MANUFACTURER OF THIS DISPLAY ASSUMES NO LIABILTY FOR INJURY CAUSED BY IMPROPER ASSEMBLY/INSTALLATION OF THIS DISPLAY.

Note: Please see "Adjusting Fixture Height" instructions before attempting to install end panels.




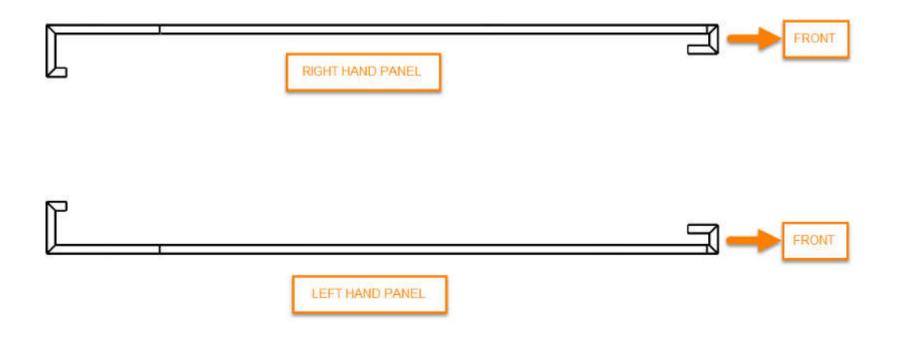

1. Identify the left hand panel and right hand panel before you begin.

Note: The side with the smaller channel will face the front of the fixture, while the side with the larger channel will face the back.




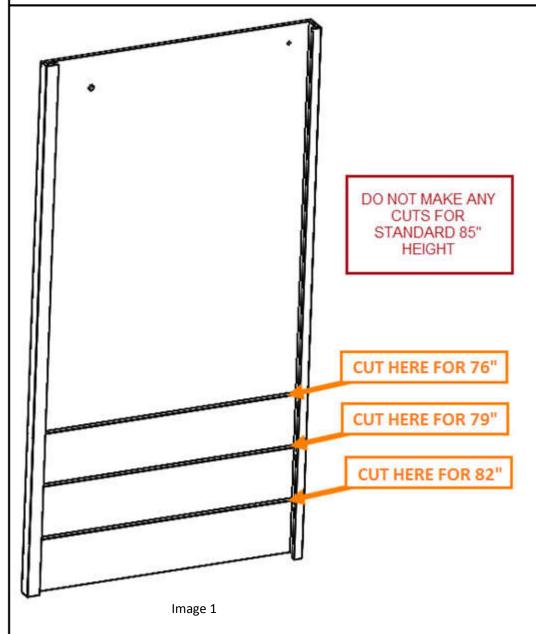


1. The miter folds along the bottom half of the upper end panels are set for specific heights. Cut along the correct fold with a utility knife to match your desired fixture height. (Image 1)

Note: <u>DO NOT</u> cut if your fixture is set at standard height (85")

Upper end panels will include an H-Channel to place between the upper and lower end panels (Image 2)

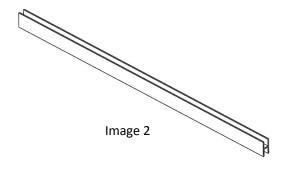

HARBOR.

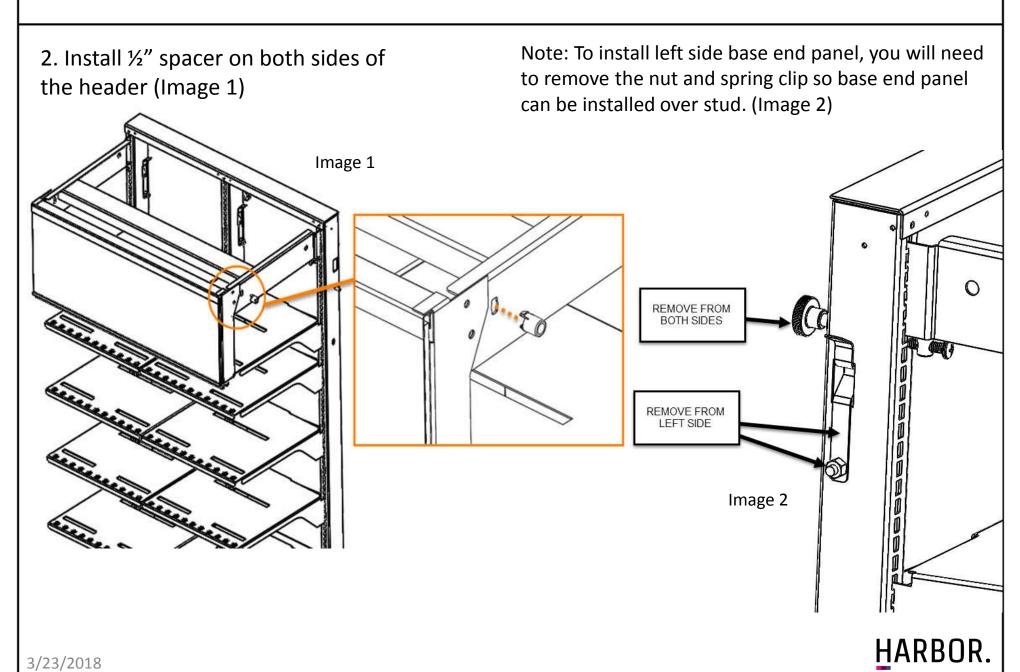

1. Remove Lock Knobs on LH and RH uprights (Image 1)

2. Align end panel with pre-drilled holes on sides of the fixture upright and press into place over the stud for the lock knob (Image 2)

