



# Telescoping Fixture Adjustment

## 1.) Loosen Lock Knobs

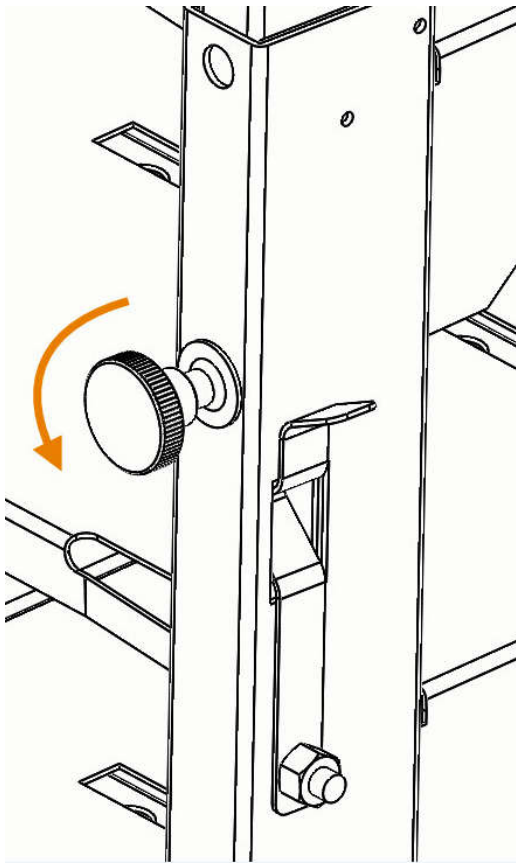


## 2.) Adjust Fixture to Height

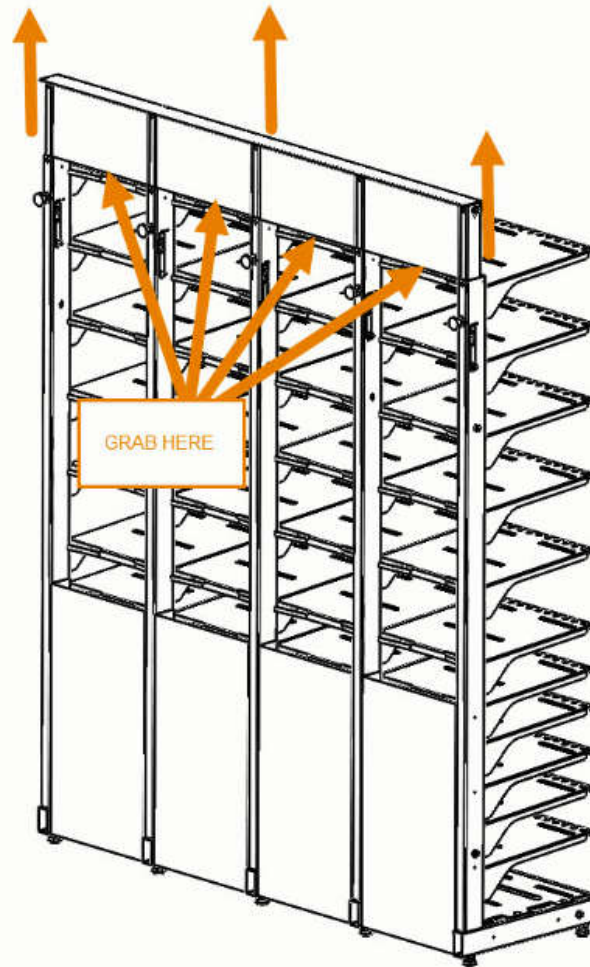

## 3.) Tighten Lock Knobs

When the fixture is at the desired height, the lock knobs MUST be tightened.

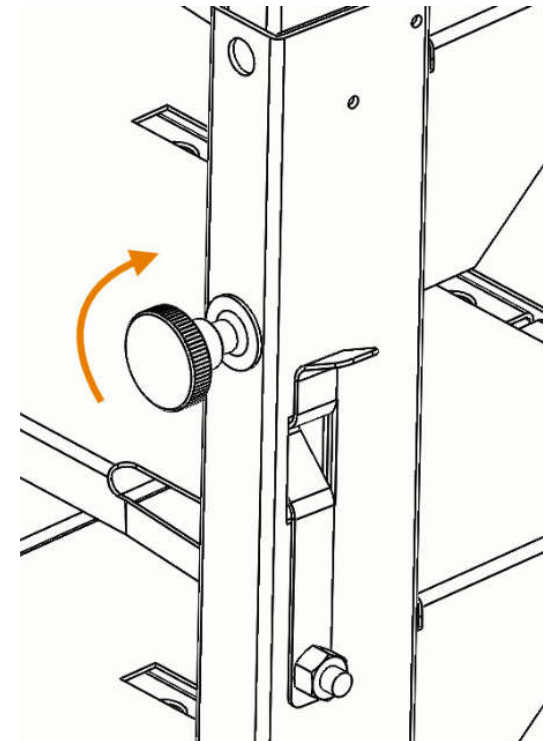

THE MANUFACTURER OF THIS DISPLAY ASSUMES NO LIABILITY FOR INJURY CAUSED BY IMPROPER ASSEMBLY/INSTALLATION OF THIS DISPLAY.