

Telescoping Fixture Adjustment

Carefully read the contents of these instructions, as the instructions indicate the correct step by step procedure to assemble the product. In the event of assembly problems or missing parts, please call our customer service department at **616-842-5330**.

CAUTION:

ASSEMBLED UNIT IS VERY HEAVY. DO NOT ATTEMPT TO LIFT OR MOVE WITHOUT ASSISTANCE.

THE MANUFACTURER OF THIS DISPLAY ASSUMES NO LIABILITY FOR INJURY CAUSED BY IMPROPER ASSEMBLY / INSTALLATION OF THIS DISPLAY.



WARNING:

This product contains chemicals known to the State of California to cause cancer and birth defects or other reproduction harm.


For more information, go to **www.P65Warnings.ca.gov**

Note: Please see “Adjusting Fixture Height” instructions before attempting to install end panels.


INF TElesc END PNL KIT PF1
Item #415623 (Silver)
Item #415622 (Black)

Telescoping Fixture Adjustment

1.) Loosen Lock Knobs.

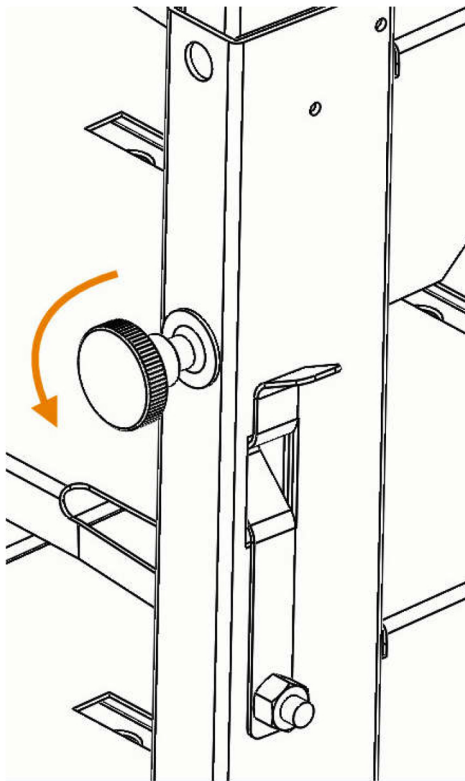


2.) Adjust Fixture to Height.

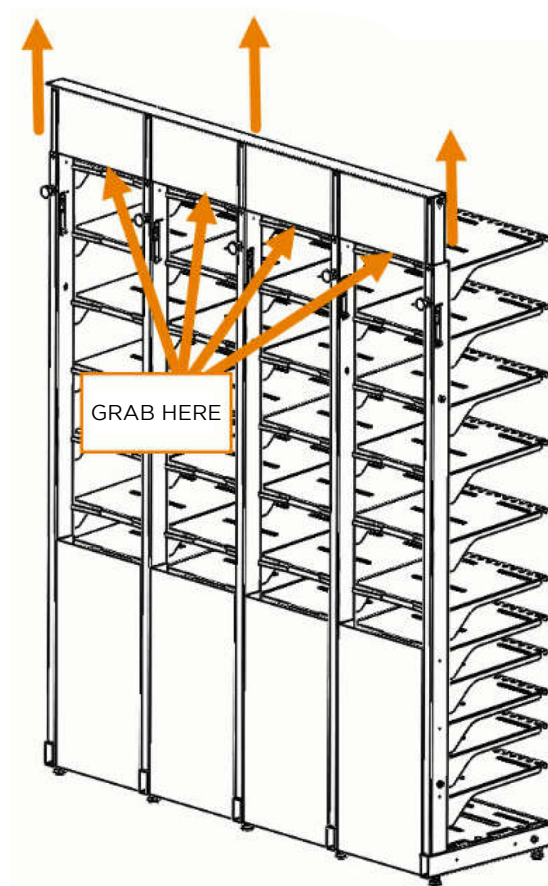

3.) Tighten Lock Knobs.

When the fixture is at the desired height, the lock knobs MUST be tightened.

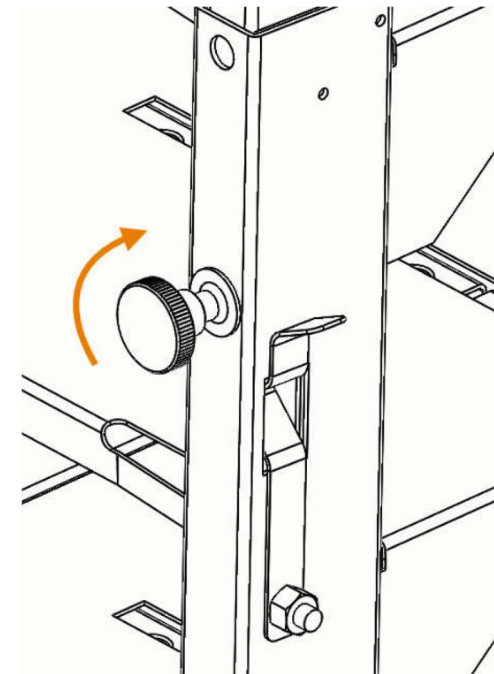

THE MANUFACTURING OF THIS DISPLAY ASSUMES NO LIABILITY CAUSED BY IMPROPER ASSEMBLY/INSTALLATION OF THIS DISPLAY.