




5/2/2018


Non-Telescoping Fixture Back Panel Installation

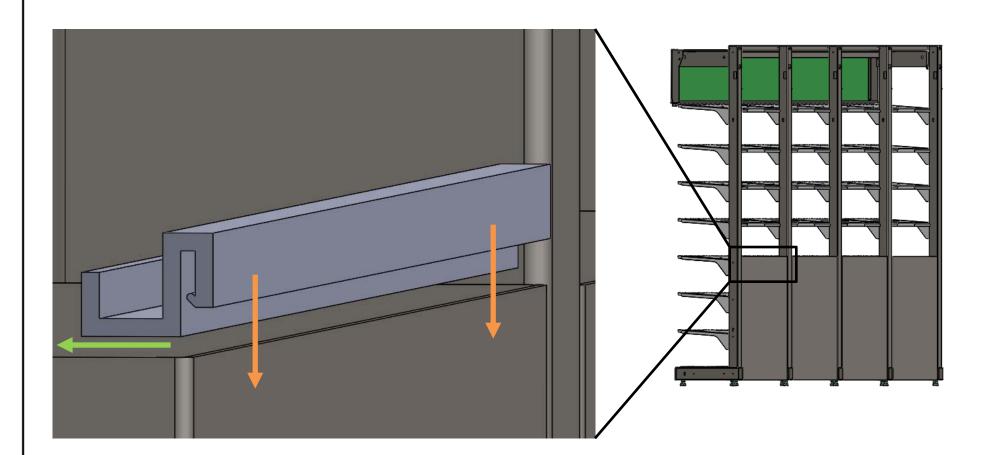


Place one of the channels onto the lower stability panel. Wide part of channel should be facing to the front of the fixture.



Non-Telescoping Fixture Back Panel Installation

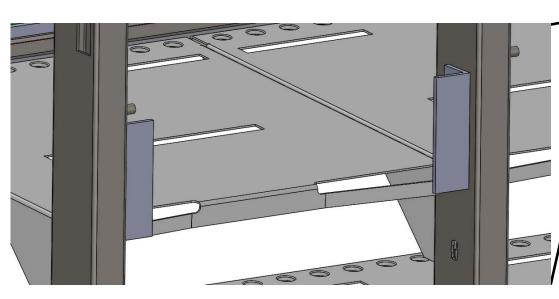

Remove backing from tape on support brackets. Secure brackets to uprights just below threaded stud locations. Leave 1/8" gap between bracket and back of upright.

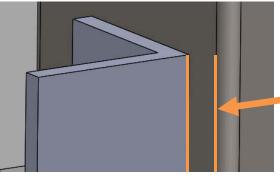

Place 1/8" in from back of upright to provide space for end panel

HARBOR.



Non-Telescoping Fixture Back Panel Installation

Insert back panel into wide channel on lower stability panel and attach to tape on brackets. Repeat all steps with all remaining back panels.

