

INTRODUCTION

PAGE 1 INTRODUCTION AND TABLE OF CONTENTS

CARTON CONTENTS

PAGE 2 2' STANDARD HEIGHT TOBACCO FIXTURE
PAGE 2 2' LOW PROFILE TOBACCO FIXTURE
PAGE 3 3' STANDARD HEIGHT TOBACCO FIXTURE
PAGE 3 3' LOW PROFILE TOBACCO FIXTURE
PAGE 4 4' STANDARD HEIGHT TOBACCO FIXTURE
PAGE 4 4' LOW PROFILE TOBACCO FIXTURE

INITIAL SETUP

PAGE 5 WHAT IS NEEDED FOR INSTALLATION
PAGE 6 INSTALLING THE SPACERS
PAGE 7 LEVELING FIXTURES

CONNECTING FIXTURES

PAGE 8 FIXTURE TO FIXTURE ALIGNMENT
PAGE 9 FIXTURE TO FIXTURE CONNECTION
PAGE 10 INTERCONNECTING ELECTRICAL CORDS

SECURING FIXTURES

PAGE 11 GUIDELINES FOR SECURING TOBACCO FIXTURES
PAGE 12 SECURING USING THE WALL BRACKETS
PAGE 13 SECURING USING THE CABLE KIT

SHELVES

PAGE 14 MOVING THE SHELVES

SPRING LOAD TRAYS

PAGE 15 LOADING PRODUCT INTO THE TOBACCO SPRING LOAD TRAYS
PAGE 16 INSTALLING/REMOVING THE TOBACCO SPRING LOAD TRAYS
PAGE 17 ASSEMBLY/DISASSEMBLY OF 5 WIDE TOBACCO SPRING LOAD TRAYS

FINAL INSTALLATION NOTES

PAGE 18 CLEAN UP AND RECYCLE INFORMATION

INTRODUCTION:

CAREFULLY READ THE CONTENTS OF THESE INSTRUCTIONS, AS THEY INDICATE THE CORRECT STEP BY STEP PROCEDURE TO ASSEMBLE THE PRODUCT. THE CARTON CONTENTS PAGE(S) WILL IDENTIFY THE ASSEMBLY PARTS. BEFORE PROCEEDING WITH THE ASSEMBLY PROCESS, MATCH THE CARTON CONTENTS TO THE STATED CONTENTS TO ENSURE THERE ARE NO MISSING PARTS. IN THE EVENT OF ASSEMBLY PROBLEMS OR MISSING PARTS, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT.

PHONE: 1-800-968-6991

WEBSITE: WWW.TOBACCOFIXTURES.COM


**THE MANUFACTURER OF THIS DISPLAY
ASSUMES NO LIABILITY FOR INJURY CAUSED
BY IMPROPER ASSEMBLY/INSTALLATION OF
THIS DISPLAY.**

Flex Frame 2


TOBACCO FIXTURES - 2', 3', 4'

LOW PROFILE & STANDARD HEIGHT

CARTON CONTENTS

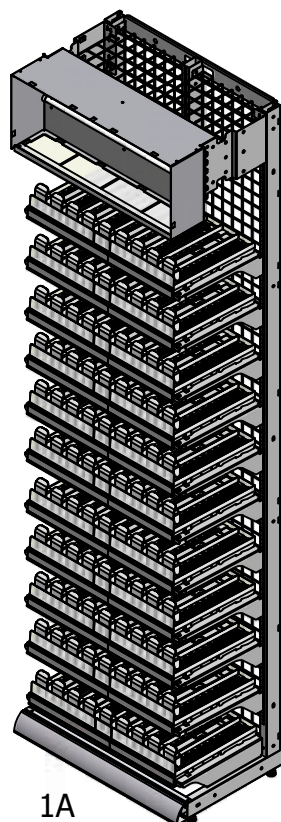

1A

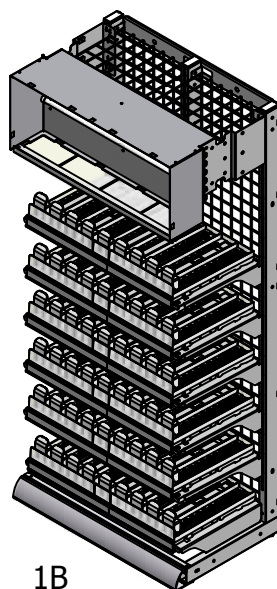

1B

2' STANDARD HEIGHT TOBACCO FIXTURE		
ITEM #	DESCRIPTION	QTY
1A	2' STANDARD HEIGHT TOBACCO FIXTURE	1
1C	WALL MOUNT BRACKET	2
1D	DRYWALL ANCHOR (NOT SHOWN)	2
1E	#8 X 2" PAN HEAD SCREW	2
1F	#1/4-20 X 3-1/2" BUTTON HEAD CAP SCREW	4
1G	#1/4-20 HEX KEPS NUT	4
1H	#1/4-20 X 1/2" BUTTON HEAD CAP SCREW	2

CARTON DIMENSIONS: 25-3/4" X 17-3/4" X 90-1/4"

CARTON WEIGHT: 128 LBS.


UNIT WEIGHT: 113 LBS.

2' LOW PROFILE TOBACCO FIXTURE		
ITEM #	DESCRIPTION	QTY
1B	2' LOW PROFILE TOBACCO FIXTURE	1
1C	WALL MOUNT BRACKET	2
1D	DRYWALL ANCHOR (NOT SHOWN)	2
1E	#8 X 2" PAN HEAD SCREW	2
1F	#1/4-20 X 3-1/2" BUTTON HEAD CAP SCREW	3
1G	#1/4-20 HEX KEPS NUT	3
1H	#1/4-20 X 1/2" BUTTON HEAD CAP SCREW	2


CARTON DIMENSIONS: 25-3/4" X 17-3/4" X 60-1/4"

CARTON WEIGHT: 88 LBS.


UNIT WEIGHT: 78 LBS.

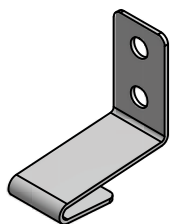

1C



1E

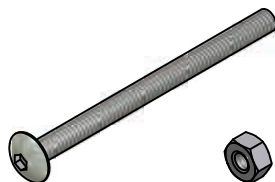

1F



1G



1H

Flex Frame 2

TOBACCO FIXTURES - 2', 3', 4'

LOW PROFILE & STANDARD HEIGHT

CARTON CONTENTS

3' STANDARD HEIGHT TOBACCO FIXTURE		
ITEM #	DESCRIPTION	QTY
2A	3' STANDARD HEIGHT TOBACCO FIXTURE	1
2C	WALL MOUNT BRACKET	2
2D	DRYWALL ANCHOR (NOT SHOWN)	2
2E	#8 X 2" PAN HEAD SCREW	2
2F	#1/4-20 X 3-1/2" BUTTON HEAD CAP SCREW	4
2G	#1/4-20 HEX KEPS NUT	4
2H	#1/4-20 X 1/2" BUTTON HEAD CAP SCREW	2
2I	1/4" SPACER	8

CARTON DIMENSIONS: 37-3/4" X 17-3/4" X 90-1/4"

CARTON WEIGHT: 203 LBS.


UNIT WEIGHT: 180 LBS.

3' LOW PROFILE TOBACCO FIXTURE		
ITEM #	DESCRIPTION	QTY
2B	3' LOW PROFILE TOBACCO FIXTURE	1
2C	WALL MOUNT BRACKET	2
2D	DRYWALL ANCHOR (NOT SHOWN)	2
2E	#8 X 2" PAN HEAD SCREW	2
2F	#1/4-20 X 3-1/2" BUTTON HEAD CAP SCREW	3
2G	#1/4-20 HEX KEPS NUT	3
2H	#1/4-20 X 1/2" BUTTON HEAD CAP SCREW	2
2I	1/4" SPACER	6


CARTON DIMENSIONS: 37-3/4" X 17-3/4" X 60-1/4"

CARTON WEIGHT: 137 LBS.


UNIT WEIGHT: 121 LBS.

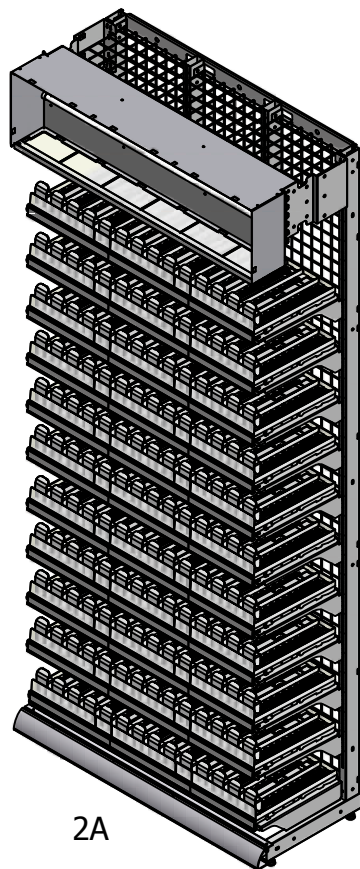


2A

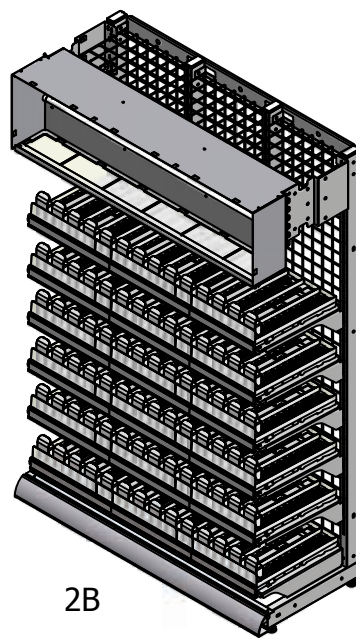


2B

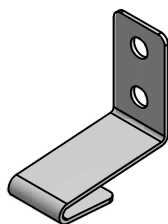

2C



2E

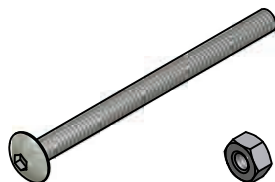

2F



2G



2H




2I

Flex Frame 2


TOBACCO FIXTURES - 2', 3', 4'

LOW PROFILE & STANDARD HEIGHT

CARTON CONTENTS

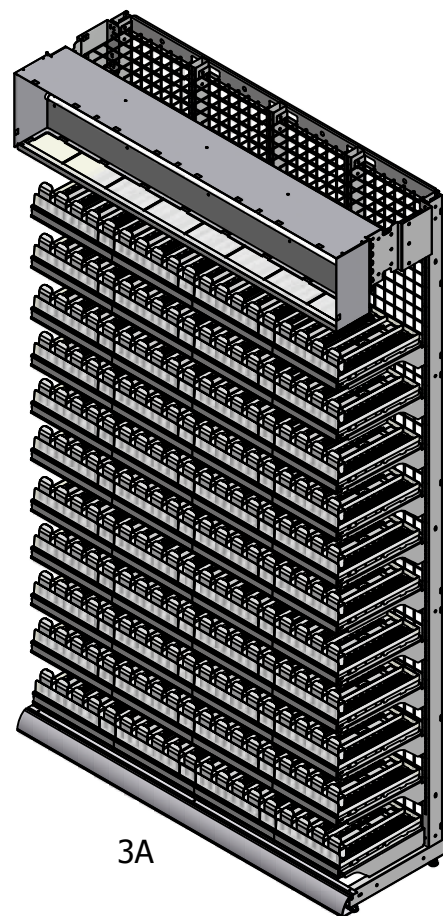

3A

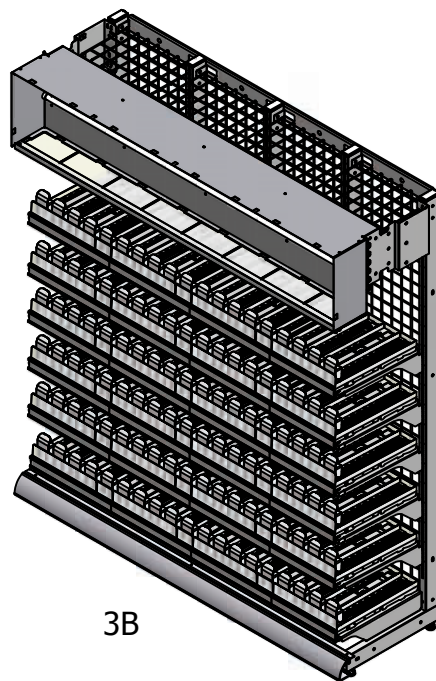

3B

4' STANDARD HEIGHT TOBACCO FIXTURE		
ITEM #	DESCRIPTION	QTY
3A	4' STANDARD HEIGHT TOBACCO FIXTURE	1
3C	WALL MOUNT BRACKET	2
3D	DRYWALL ANCHOR (NOT SHOWN)	2
3E	#8 X 2" PAN HEAD SCREW	2
3F	#1/4-20 X 3-1/2" BUTTON HEAD CAP SCREW	4
3G	#1/4-20 HEX KEPS NUT	4
3H	#1/4-20 X 1/2" BUTTON HEAD CAP SCREW	2
3I	1/2" SPACER	8

CARTON DIMENSIONS: 49-3/4" X 17-3/4" X 90-1/4"

CARTON WEIGHT: 262 LBS.


UNIT WEIGHT: 232 LBS.

4' LOW PROFILE TOBACCO FIXTURE		
ITEM #	DESCRIPTION	QTY
3B	4' LOW PROFILE TOBACCO FIXTURE	1
3C	WALL MOUNT BRACKET	2
3D	DRYWALL ANCHOR (NOT SHOWN)	2
3E	#8 X 2" PAN HEAD SCREW	2
3F	#1/4-20 X 3-1/2" BUTTON HEAD CAP SCREW	3
3G	#1/4-20 HEX KEPS NUT	3
3H	#1/4-20 X 1/2" BUTTON HEAD CAP SCREW	2
3I	1/2" SPACER	6


CARTON DIMENSIONS: 49-3/4" X 17-3/4" X 60-1/4"

CARTON WEIGHT: 176 LBS.


UNIT WEIGHT: 156 LBS.

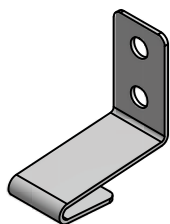

3C



3E

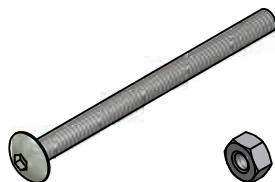

3F



3G



3H




3I

Flex Frame 2

TOBACCO FIXTURES - 2', 3', 4'

LOW PROFILE & STANDARD HEIGHT

INSTALLATION INSTRUCTIONS

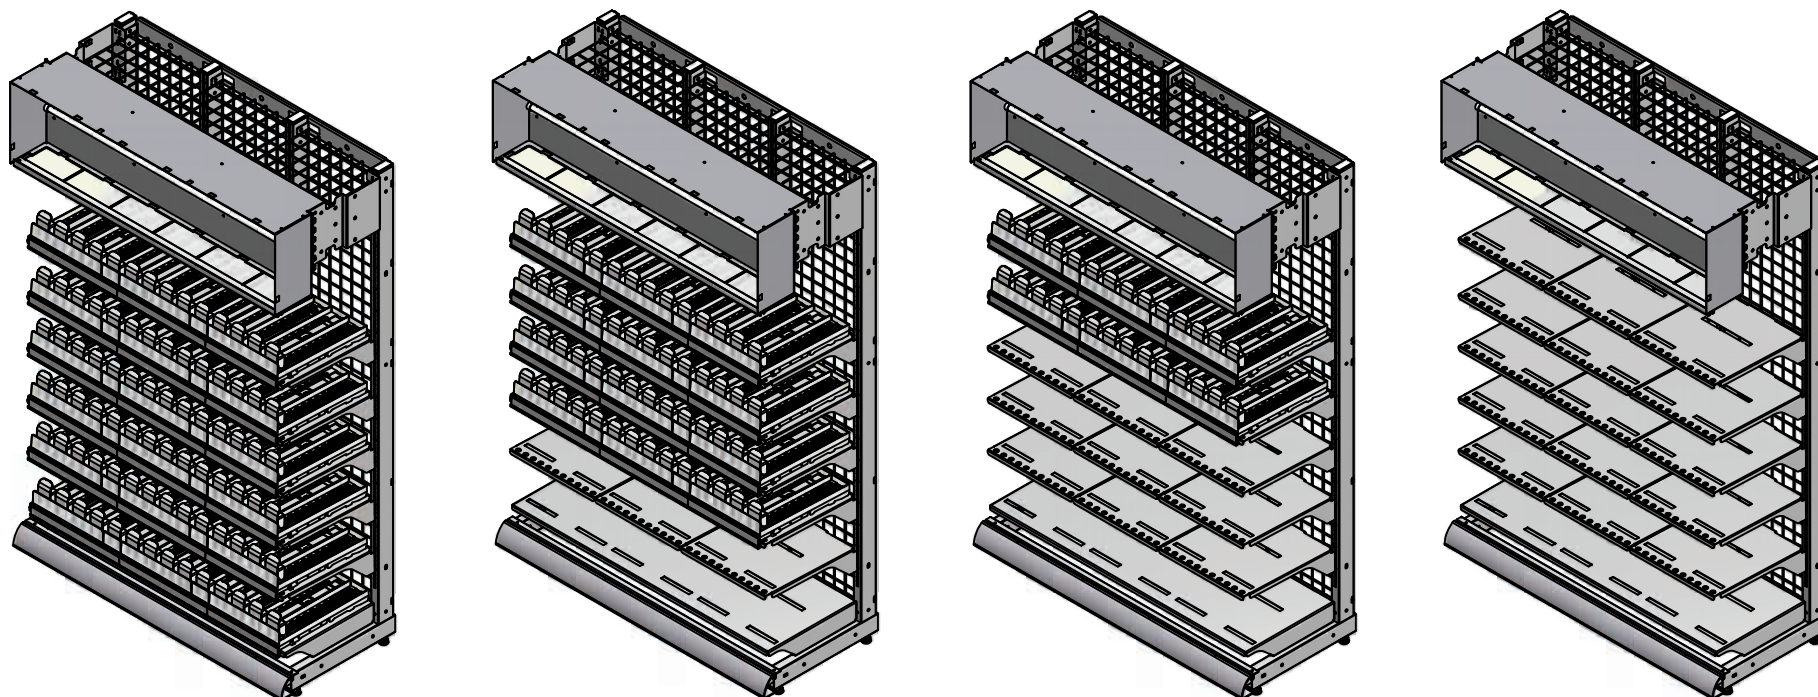

WHAT IS NEEDED FOR INSTALLATION

NOTE - TOBACCO FIXTURES ARE AVAILABLE IN SEVERAL DIFFERENT CONFIGURATIONS. THE TOBACCO FIXTURES SHOWN IN THESE INSTRUCTIONS MAY VARY FROM THE ACTUAL CONFIGURATION OF THOSE ORDERED. HOWEVER, INSTALLATION IS SIMILAR FOR ALL SIZES, COLORS, AND CONFIGURATIONS OF TOBACCO FIXTURES.

CAUTION - ASSEMBLED TOBACCO FIXTURES MAY BE VERY HEAVY. DO NOT ATTEMPT TO LIFT OR MOVE WITHOUT ASSISTANCE.

NUMBER OF PEOPLE REQUIRED TO ASSEMBLE UNIT:
(2)

ASSEMBLY TOOLS REQUIRED:


DRILL/DRIVER

PHILLIPS BIT OR SCREWDRIVER

5/32" HEX BIT OR WRENCH

7/16" OR ADJUSTABLE WRENCH

INSTALLATION INSTRUCTIONS

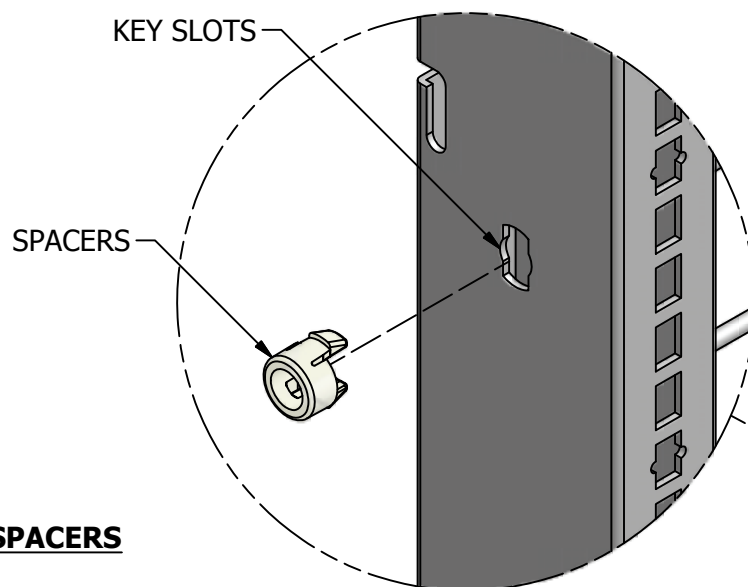

VIEW 1

INSTALLING THE SPACERS

STEP 1 - INSTALL THE SPACERS INTO THE UPRIGHTS OF THE TOBACCO FIXTURE. (VIEW 2)

NOTE - TO INSTALL, ALIGN THE SPACERS WITH THE KEY SLOTS ON THE UPRIGHTS AND PUSH UNTIL THEY CLIP INTO PLACE. (VIEW 1)

NOTE - THE QUANTITY AND SIZE OF THE SPACERS IS DIFFERENT FOR EACH TOBACCO FIXTURE;

2' LOW PROFILE = NO SPACERS

2' STANDARD HEIGHT = NO SPACERS


3' LOW PROFILE = (6) 1/4" SPACERS, (3) EACH SIDE

3' STANDARD HEIGHT = (8) 1/4" SPACERS, (4) EACH SIDE

4' LOW PROFILE = (6) 1/2" SPACERS, (3) EACH SIDE

4' STANDARD HEIGHT = (8) 1/2" SPACERS, (4) EACH SIDE

3' LOW PROFILE TOBACCO
FIXTURE SHOWN

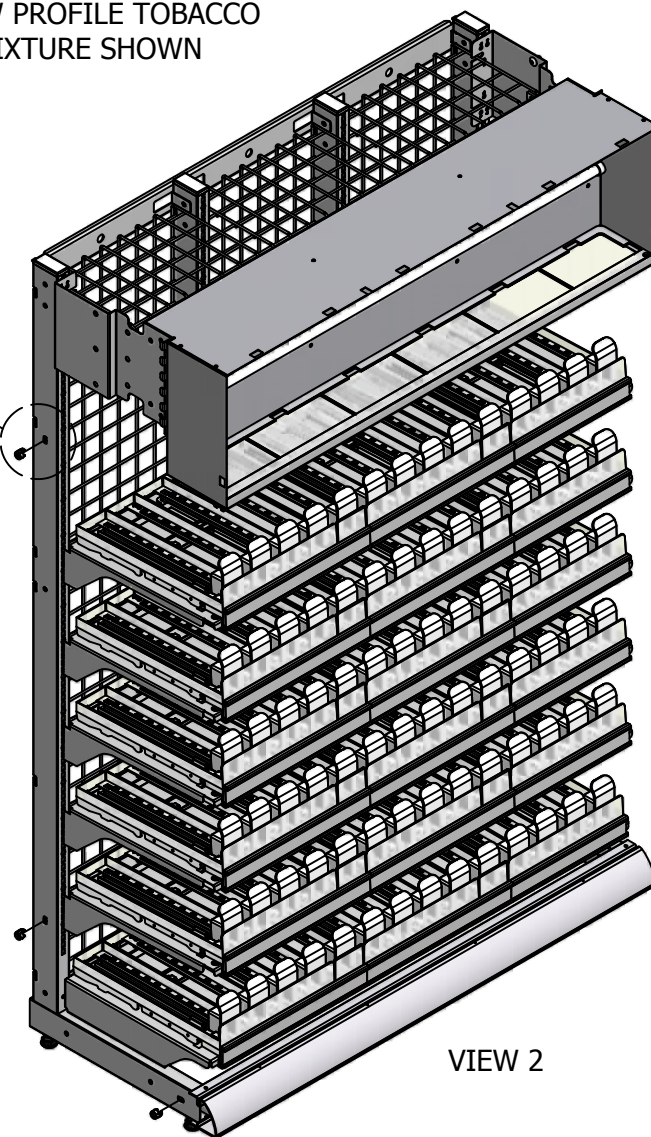

INSTALLATION INSTRUCTIONS

3' LOW PROFILE TOBACCO
FIXTURE SHOWN


LEVELING FIXTURES

STEP 2- PLACE THE TOBACCO FIXTURE IN IT'S DESIRED LOCATION,
THEN COMPLETELY LEVEL THE FIXTURE USING THE LEVELERS ON THE
BASE. (VIEW 3 AND VIEW 4)

NOTE - THE 2' AND 3' TOBACCO FIXTURES HAVE (4) LEVELERS. THE 4'
TOBACCO FIXTURE HAS (6) LEVELERS.


**WARNING - ALL TOBACCO FIXTURES MUST BE PROPERLY
LEVELED BEFORE CONTINUING INSTALLATION. IF A TOBACCO
FIXTURE IS NOT PROPERLY LEVELED IT MAY BECOME
UNSTABLE.**

IMPORTANT - FAILURE TO LEVEL TOBACCO FIXTURES MAY MAKE IT
MORE DIFFICULT TO INSTALL ACCESSORIES SUCH AS SECURITY
DOORS, OR ATTACH (2) ADJACENT TOBACCO FIXTURES TOGETHER.

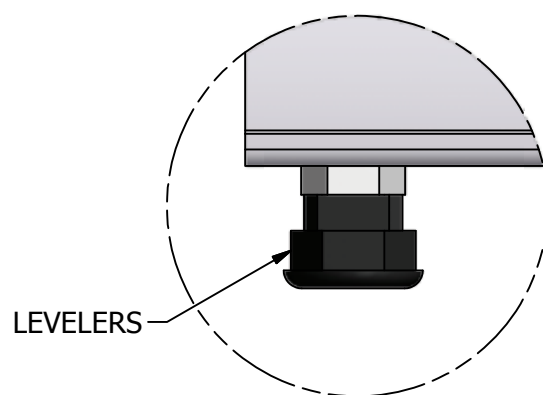

LEVELERS

VIEW 3

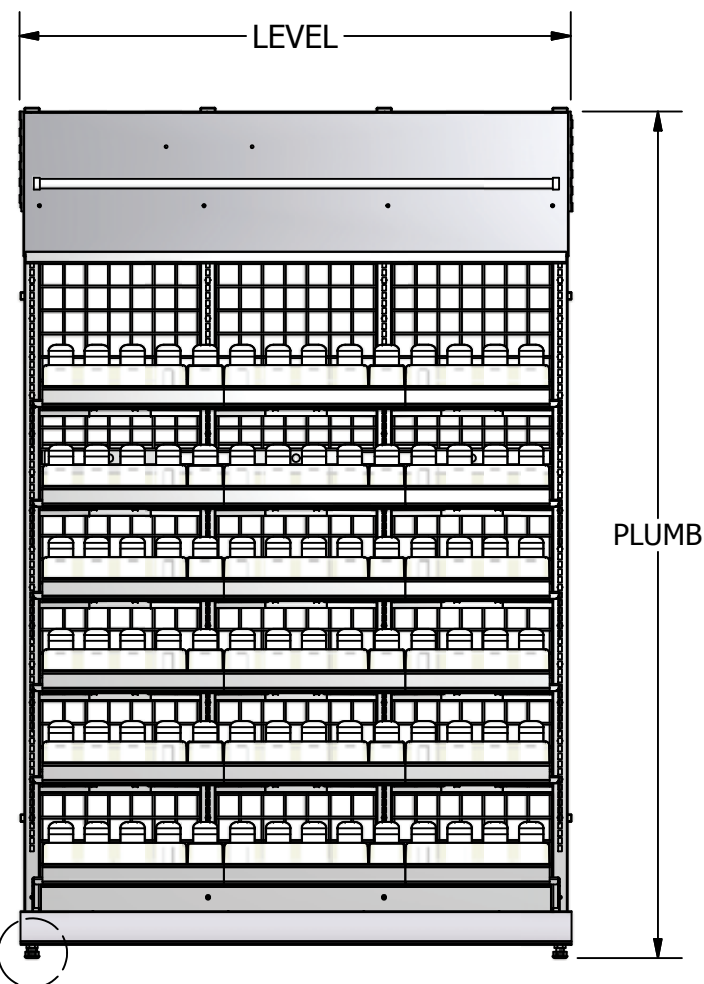


VIEW 4


Flex Frame 2

TOBACCO FIXTURES - 2', 3', 4'


LOW PROFILE & STANDARD HEIGHT

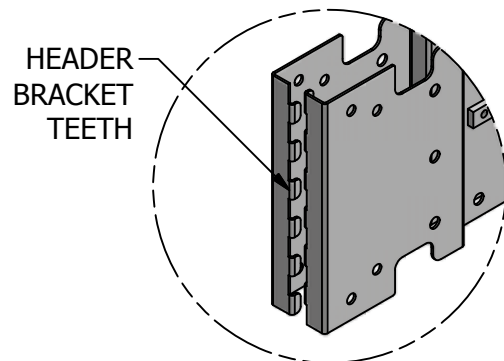

VIEW 5

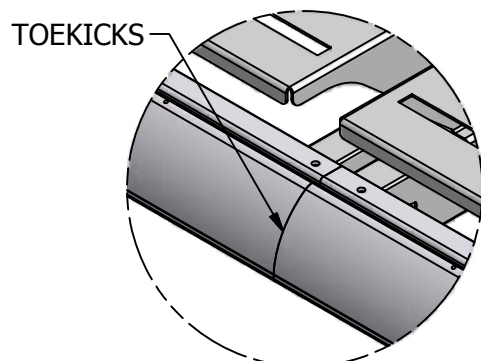

VIEW 6

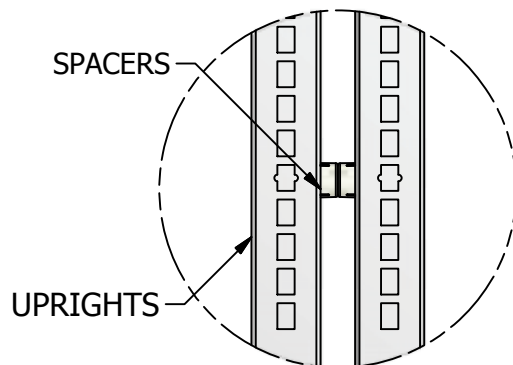

VIEW 7

FIXTURE TO FIXTURE ALIGNMENT


**STEP 3 - PUSH/SLIDE
THE TOBACCO
FIXTURES INTO THEIR
FINAL LOCATION,
MAKING SURE THEY
ARE PROPERLY
ALIGNED WITH EACH
OTHER. (VIEW 8)**

**NOTE - ADJACENT
TOBACCO FIXTURES
NEED TO ALIGN WITH
EACH OTHER AT (3)
KEY LOCATIONS;**

THE TEETH ON THE
HEADER BRACKETS
NEED TO INTERLOCK
WITH EACH OTHER
(VIEW 5)

THE TOE KICKS NEED TO BE
ALIGNED WITH EACH OTHER
(VIEW 6)

IF PRESENT, ALL OF THE
SPACERS ON THE UPRIGHTS
NEED TO ALIGN WITH EACH
OTHER. (VIEW 7)

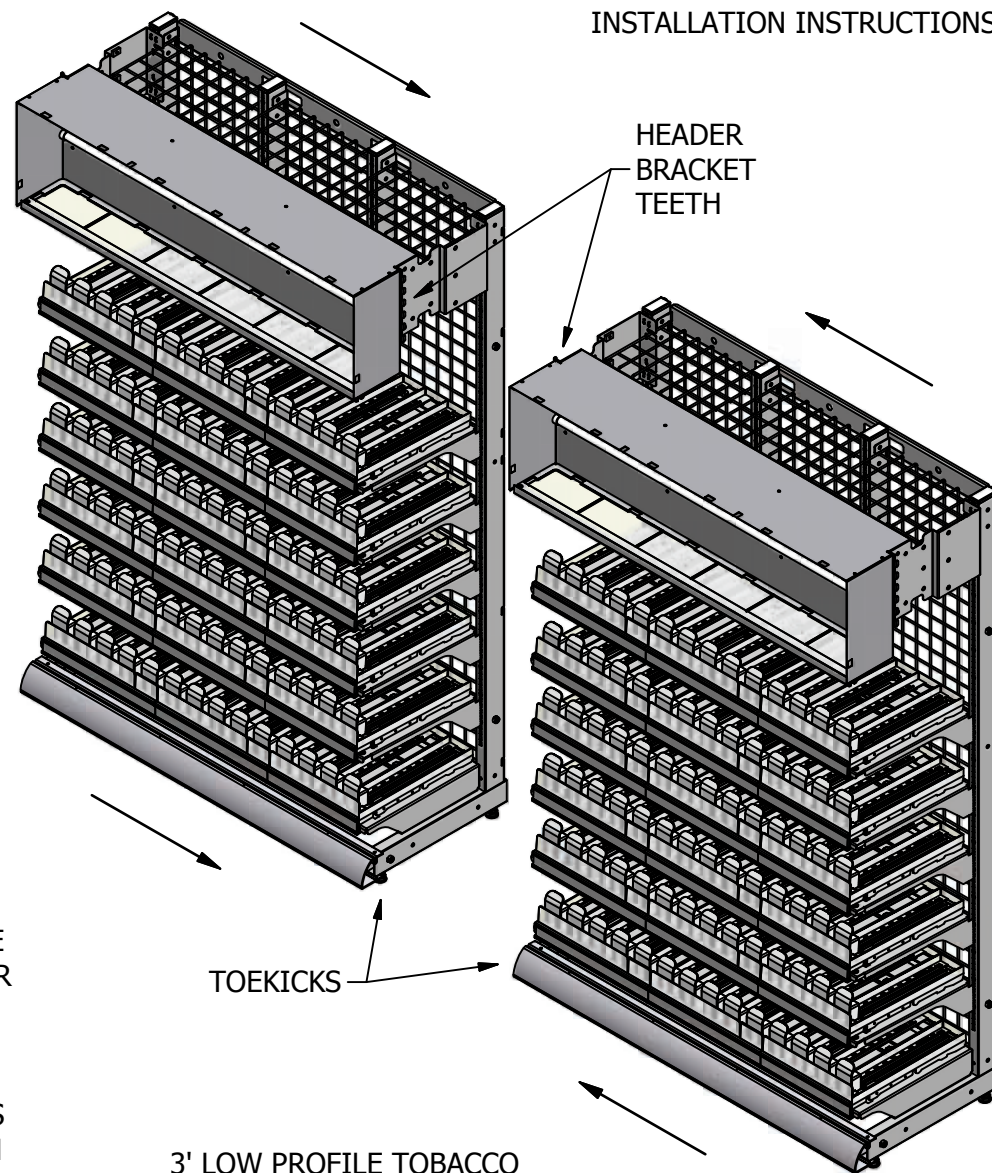

3' LOW PROFILE TOBACCO
FIXTURES SHOWN

VIEW 8

INSTALLATION INSTRUCTIONS


Flex Frame 2

TOBACCO FIXTURES - 2', 3', 4'

LOW PROFILE & STANDARD HEIGHT

INSTALLATION INSTRUCTIONS

#1/4-20 x 1/2"
BUTTON HEAD
CAP SCREWS

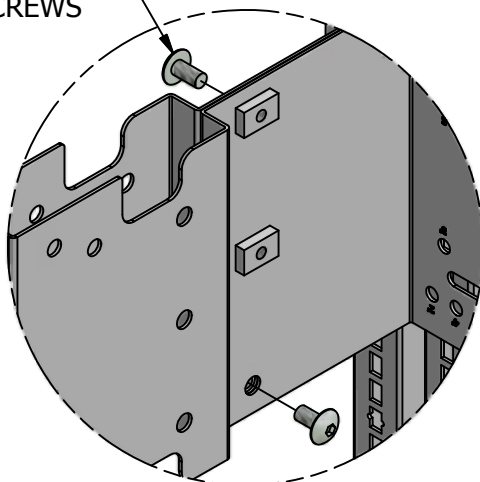


VIEW 9

FIXTURE TO FIXTURE CONNECTION

STEP 4 - SECURE THE HEADERS OF THE TOBACCO FIXTURES TOGETHER USING (2) #1/4-20 X 1/2" BUTTON HEAD CAP SCREWS, (1) FROM EACH SIDE (VIEW 9).

STEP 5 - SECURE THE UPRIGHTS OF THE TOBACCO FIXTURES TOGETHER USING #1/4-20 X 3-1/2" BUTTON HEAD CAP SCREWS AND #1/4-20 HEX KEPS NUTS. (VIEW 10)

#1/4-20
KEPS
NUTS

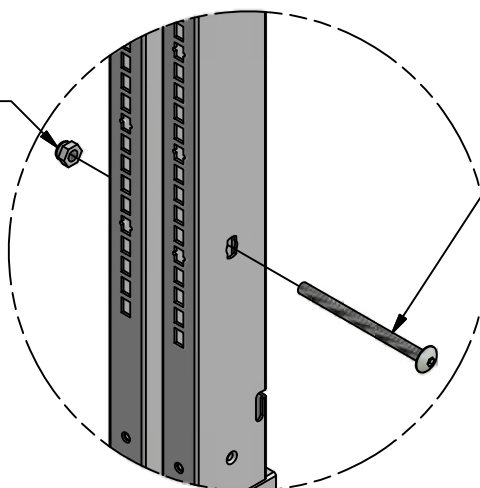


VIEW 10

#1/4-20 x 3-1/2"
BUTTON HEAD
CAP SCREWS

NOTE - LOW PROFILE TOBACCO FIXTURES WILL USE (3) #1/4-20 X 3-1/2" BUTTON HEAD CAP SCREWS AND (3) #1/4-20 HEX KEPS NUTS.

NOTE - STANDARD HEIGHT TOBACCO FIXTURES WILL USE (4) #1/4-20 X 3-1/2" BUTTON HEAD CAP SCREWS AND (4) #1/4-20 HEX KEPS NUTS.

3' LOW PROFILE TOBACCO
FIXTURES SHOWN

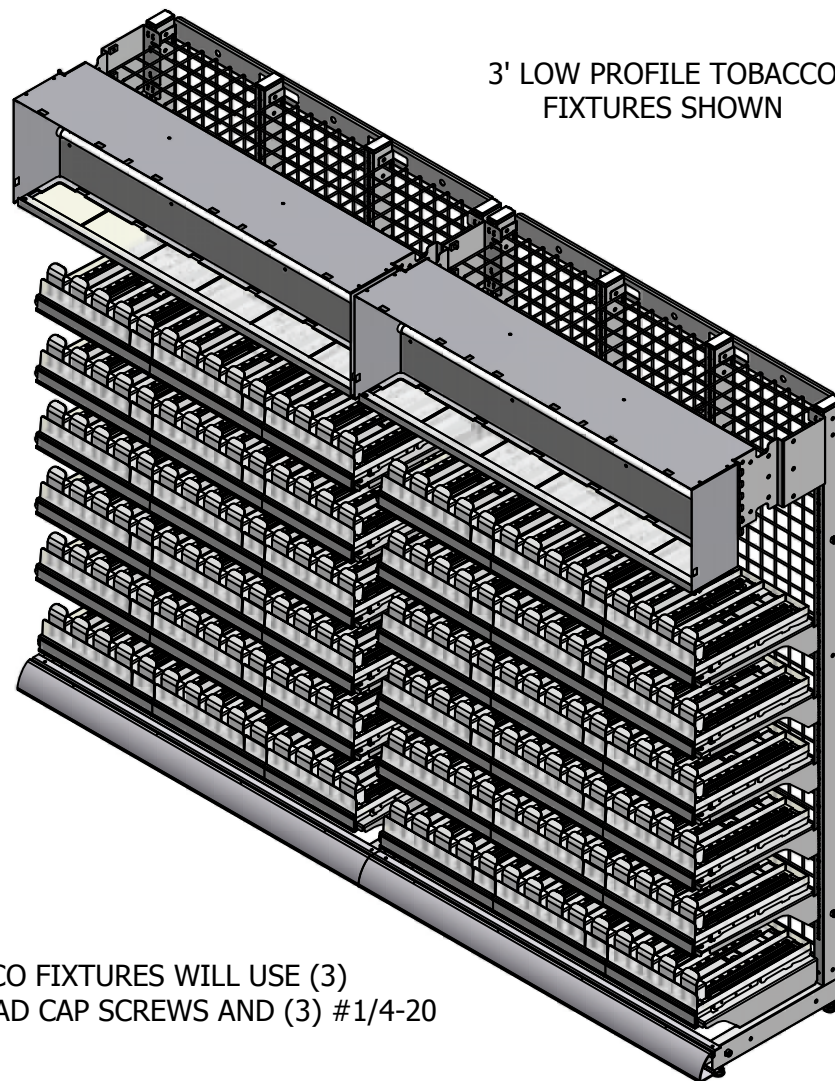

VIEW 11

INSTALLATION INSTRUCTIONS

INTERCONNECTING ELECTRICAL CORDS


STEP 6 - PLUG THE AC ELECTRICAL CORD OF THE FIRST TOBACCO FIXTURE INTO THE 110V SOURCE OUTLET. (VIEW 12)

STEP 7 - AS ADDITIONAL TOBACCO FIXTURES ARE CONNECTED TOGETHER IN A RUN, INTERCONNECT THE ELECTRICAL CORDS AS NEEDED. (VIEW 12)

IMPORTANT - A MAXIMUM OF FIVE TOBACCO FIXTURES MAY BE INTERCONNECTED TOGETHER.

NOTE - WHEN INTERCONNECTING TOBACCO FIXTURES ALWAYS USE THE RH RECEPTACLE ON THE BACK SIDE OF THE HEADER. (VIEW 12)

NOTE - THE LH RECEPTACLE ON THE BACK SIDE OF THE HEADER IS FOR ACCESSORY USE. ONLY 120V 1.5A (MAX) HARBOR APPROVED POWER SUPPLIES MAY BE USED. (VIEW 12)

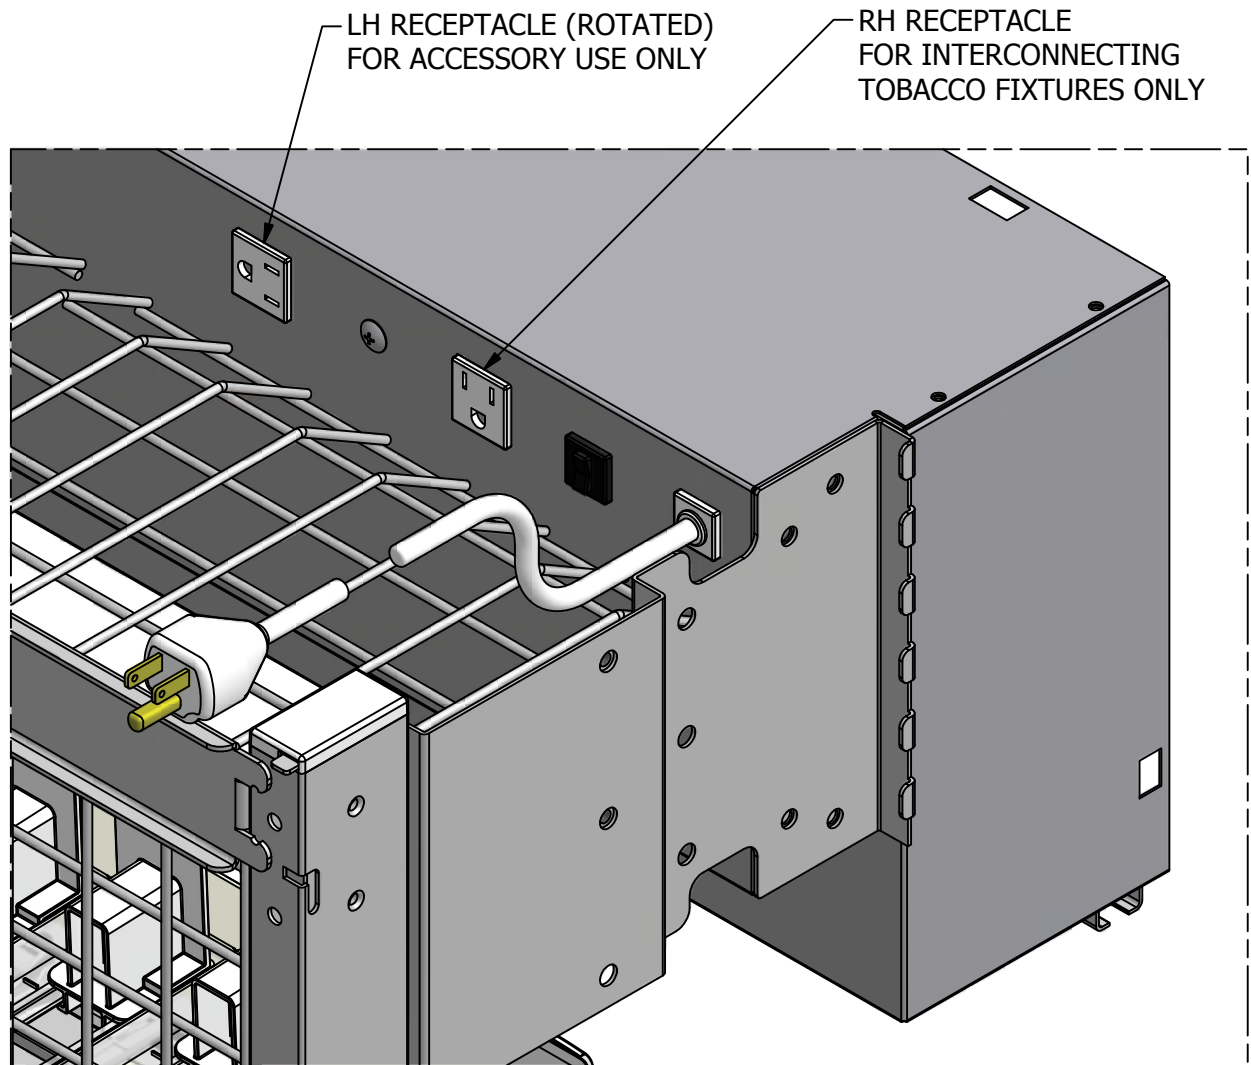

VIEW 12

GUIDELINES FOR SECURING TOBACCO FIXTURES

INSTALLATION INSTRUCTIONS

IT IS IMPORTANT THAT ALL TOBACCO FIXTURES ARE SECURED PROPERLY DURING INSTALLATION. USE THE FOLLOWING GUIDELINES TO ENSURE THAT NO TOBACCO FIXTURE IS LEFT UNSTABLE;

WARNING - ANY TOBACCO FIXTURE THAT CAN BE ACCESSED BY THE GENERAL PUBLIC MUST BE PROPERLY SECURED IN PLACE USING THE APPROPRIATE METHOD. UNDER NO CIRCUMSTANCES SHOULD A TOBACCO FIXTURE THAT CAN BE ACCESSED BY THE GENERAL PUBLIC BE LEFT FREE STANDING, REGARDLESS OF SIZE OR CONFIGURATION.

IMPORTANT - USE AT LEAST TWO WALL MOUNT BRACKETS TO SECURE EACH TOBACCO FIXTURE. SEE PAGE 12 FOR ADDITIONAL INFORMATION ON INSTALLING THE WALL BRACKETS.

IMPORTANT - ALL TOBACCO FIXTURES SHOULD BE ANCHORED TO A STATIONARY WALL OR OBJECT. IF NECESSARY THE CABLE KIT MAY BE USED IN CONJUNCTION WITH THE WALL BRACKETS TO SECURE TOBACCO FIXTURES. SEE PAGE 13 FOR ADDITIONAL INFORMATION ON INSTALLING THE CABLE KIT.

SINGLE LOW PROFILE TOBACCO FIXTURES; SINGLE LOW PROFILE TOBACCO FIXTURES SHOULD BE SECURED IN PLACE USING THE APPROPRIATE METHOD WHENEVER POSSIBLE. IF NECESSARY A SINGLE LOW PROFILE TOBACCO FIXTURE MAY BE LEFT FREESTANDING IF ACCESS IS LIMITED TO STORE PERSONNEL.

MULTIPLE LOW PROFILE TOBACCO FIXTURES; MULTIPLE LOW PROFILE TOBACCO FIXTURES IN A RUN MUST BE COMPLETELY CONNECTED TO ONE ANOTHER. THEY SHOULD ALSO BE SECURED IN PLACE USING THE APPROPRIATE METHOD WHENEVER POSSIBLE. IF NECESSARY, A CONNECTED RUN OF LOW PROFILE TOBACCO FIXTURES MAY BE LEFT FREESTANDING IF ACCESS IS LIMITED TO STORE PERSONNEL.

SINGLE STANDARD HEIGHT TOBACCO FIXTURES; SINGLE STANDARD HEIGHT TOBACCO FIXTURES MUST BE SECURED IN PLACE USING THE PROVIDED WALL BRACKETS.

MULTIPLE STANDARD HEIGHT TOBACCO FIXTURES; MULTIPLE STANDARD HEIGHT TOBACCO FIXTURES IN A RUN MUST BE COMPLETELY CONNECTED TO ONE ANOTHER. THEY MUST ALSO BE SECURED IN PLACE USING THE APPROPRIATE METHOD. IF NECESSARY, A CONNECTED RUN OF STANDARD HEIGHT TOBACCO FIXTURES MAY BE LEFT FREESTANDING IF THE COMBINED LENGTH OF THE CONNECTED FIXTURES IS 8' OR GREATER AND ACCESS IS LIMITED TO STORE PERSONNEL.

COMBINED LOW PROFILE AND STANDARD HEIGHT TOBACCO FIXTURES; ANY RUN OF MIXED HEIGHT TOBACCO FIXTURES MUST ALL BE COMPLETELY CONNECTED TO ONE ANOTHER. THEY MUST ALSO BE SECURED IN PLACE USING THE APPROPRIATE METHOD. IF NECESSARY, A CONNECTED RUN OF MIXED HEIGHT TOBACCO FIXTURES MAY BE LEFT FREESTANDING IF THE COMBINED LENGTH OF THE CONNECTED FIXTURES IS 8' OR GREATER AND ACCESS IS LIMITED TO STORE PERSONNEL.

INSTALLATION INSTRUCTIONS

SECURING USING THE WALL BRACKETS

NOTE - USE AT LEAST TWO WALL MOUNT BRACKETS TO SECURE A TOBACCO FIXTURE TO A WALL.


STEP 8 - DETERMINE THE POSITION OF THE WALL MOUNT BRACKETS ON THE TOBACCO FIXTURE AND HOOK THEM OVER THE WIRE GRID. MARK THE MOUNTING SCREW LOCATIONS ON THE WALL. (VIEW 13 AND VIEW 14)

STEP 9 - CHOOSE THE APPROPRIATE METHOD AND HARDWARE FOR INSTALLING THE WALL MOUNT BRACKETS.


STEP 9A WOOD STUDS - ANCHOR THE BRACKETS TO THE WOOD STUDS IN THE WALL USING ONE #8 X 2" PAN HEAD SCREW PER BRACKET (PROVIDED).

STEP 9B DRYWALL 1/2" OR THICKER - INSTALL THE DRYWALL ANCHORS INTO THE WALL, THEN ANCHOR THE BRACKETS TO THE WALL USING #8 X 2" PAN HEAD SCREWS. USE ONE SCREW AND ONE ANCHOR PER BRACKET (PROVIDED).

STEP 9C ALL OTHER WALL TYPES - USE HIGH STRENGTH FASTENERS APPROPRIATE FOR THE WALL TYPE (NOT PROVIDED).

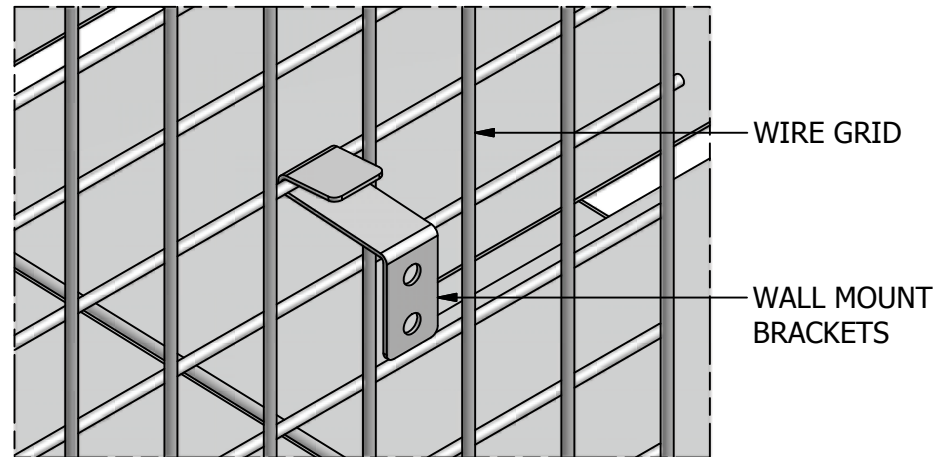

VIEW 13 (BACK SHOWN)

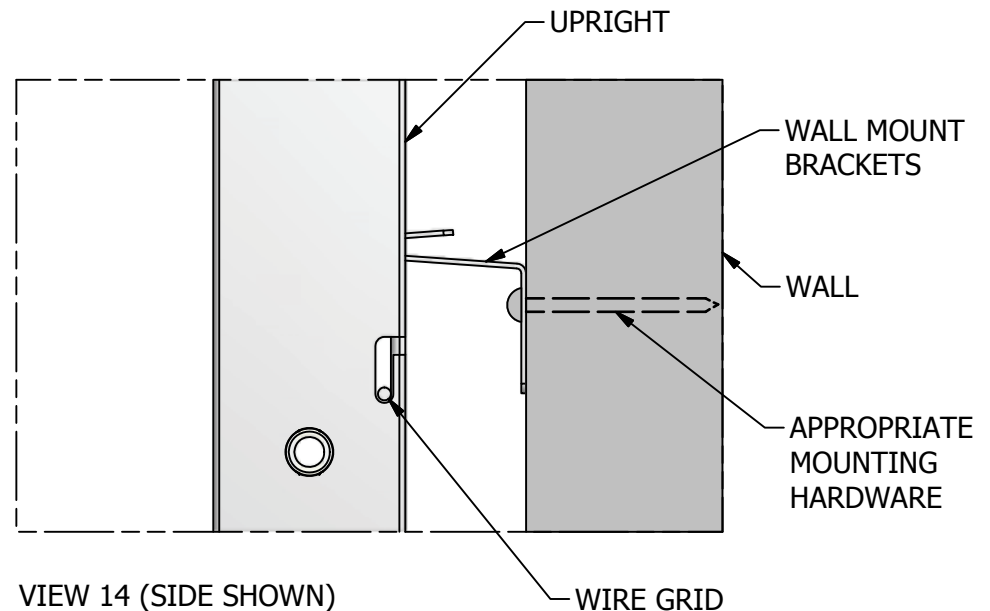

VIEW 14 (SIDE SHOWN)

INSTALLATION INSTRUCTIONS


SECURING USING THE CABLE KIT

NOTE - IF A TOBACCO FIXTURE CAN NOT BE ATTACHED DIRECTLY TO A WALL, IT CAN BE ATTACHED TO ANOTHER STATIONARY OBJECT USING THE WALL MOUNT BRACKETS AND THE SUPPLIED CABLE KIT. (VIEW 15)


STEP 10 - TO USE THE CABLE KIT FIRST INSTALL THE WALL MOUNT BRACKETS IN THE NECESSARY LOCATIONS, PER THE INSTRUCTIONS ON PAGE 12.

STEP 11 - USE THE CABLE KIT TO SECURE THE TOBACCO FIXTURE TO THE WALL MOUNT BRACKETS. (VIEW 15)

NOTE - WHEN SECURING A TOBACCO FIXTURE USING THE CABLE KIT USE THE CROSS BRACE ON THE BACK OF THE TOBACCO FIXTURE AS THE PREFERRED ANCHOR POINT. IF NECESSARY THE CABLE KITS CAN ALSO BE SECURED TO THE WIRE GRIDS, BUT ONLY IF THE CROSS RAILS CAN'T BE USED. (VIEW 16)

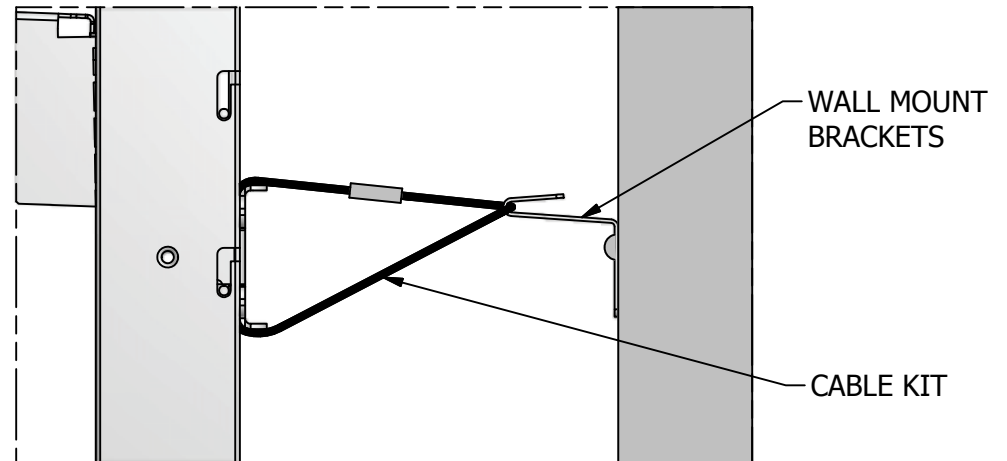

VIEW 15 (SIDE SHOWN)

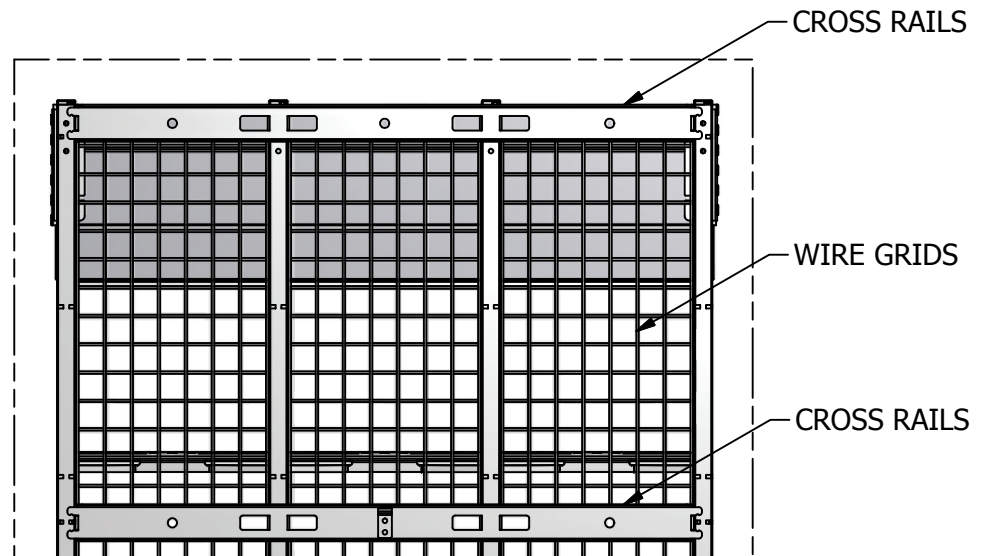


VIEW 16 (BACK SHOWN)

Flex Frame 2

TOBACCO FIXTURES - 2', 3', 4'

LOW PROFILE & STANDARD HEIGHT

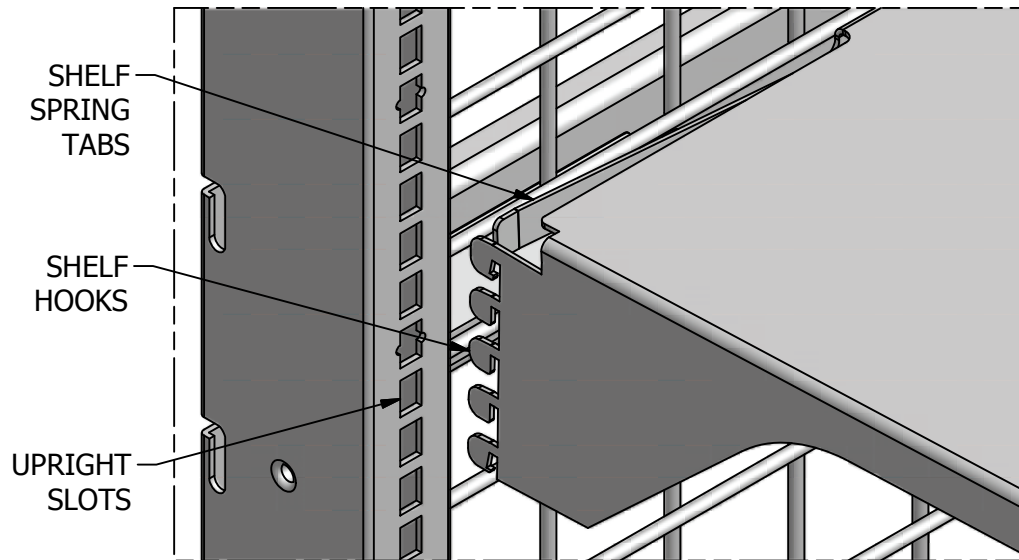


VIEW 17

SECOND - LIFT THE SHELF UPWARDS TO DISENGAGE THE SHELF HOOKS FROM THE UPRIGHT

INSTALLATION INSTRUCTIONS

THIRD - PULL THE SHELF FORWARD UNTIL IT IS OUT OF THE FIXTURE

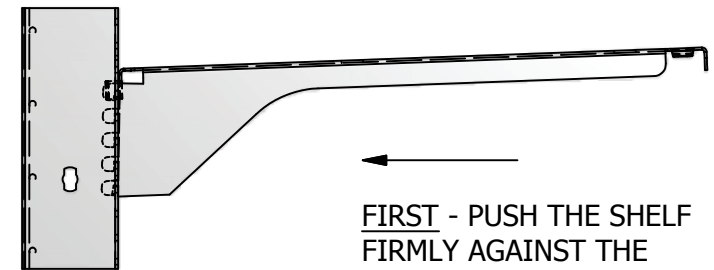

VIEW 18

FIRST - PUSH THE SHELF FIRMLY AGAINST THE UPRIGHTS

MOVING THE SHELVES

NOTE - THE SHELVES ARE ATTACHED TO THE UPRIGHTS USING A HOOK AND SLOT ARRANGEMENT. LARGE SPRING TABS ON THE BACK OF THE SHELVES PROVIDE FORWARD TENSION THAT KEEPS THE HOOKS ENGAGED WITH THE UPRIGHTS, PREVENTING THE ACCIDENTAL DISLODGING OF THE SHELVES. (VIEW 17)

NOTE - THE UPRIGHT SLOTS ARE SPACED AT 1/2", WITH VISUAL REFERENCE MARKS EVERY 5TH SLOT. (VIEW 17)


STEP 12 - REMOVING A SHELF - FIRST - FIRMLY PUSH THE SHELF IN TOWARDS THE UPRIGHT. (VIEW 18)

SECOND - LIFT THE SHELF UPWARDS WHILE KEEPING PRESSURE ON THE SPRING TABS. (VIEW 18)


THIRD - PULL THE SHELF FORWARD, UNTIL IT IS OUT OF THE TOBACCO FIXTURE. (VIEW 18)

STEP 13 - INSTALLING A SHELF - REVERSE STEP 12 TO INSTALL A SHELF.

INSTALLATION INSTRUCTIONS

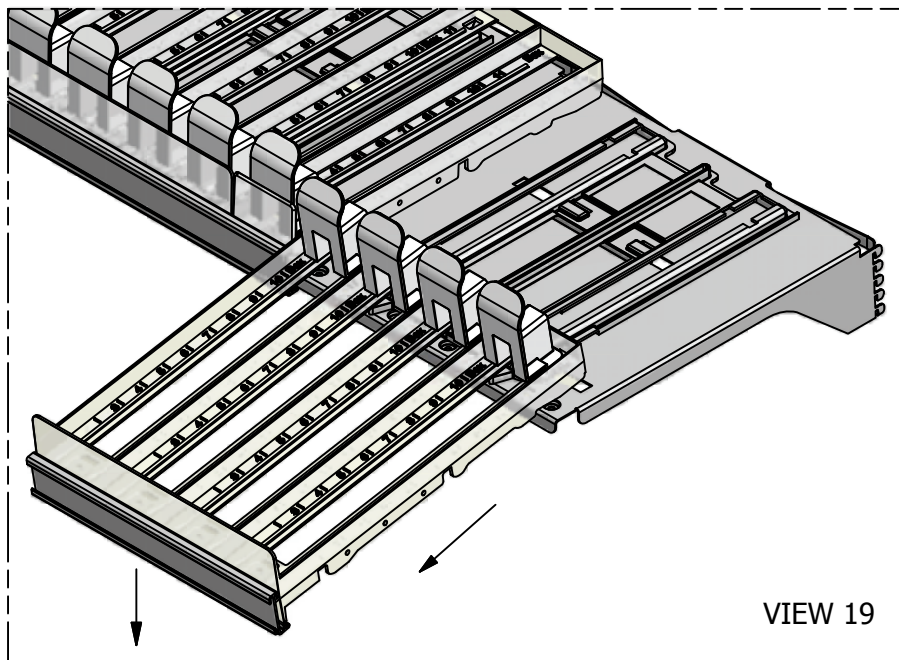

VIEW 19

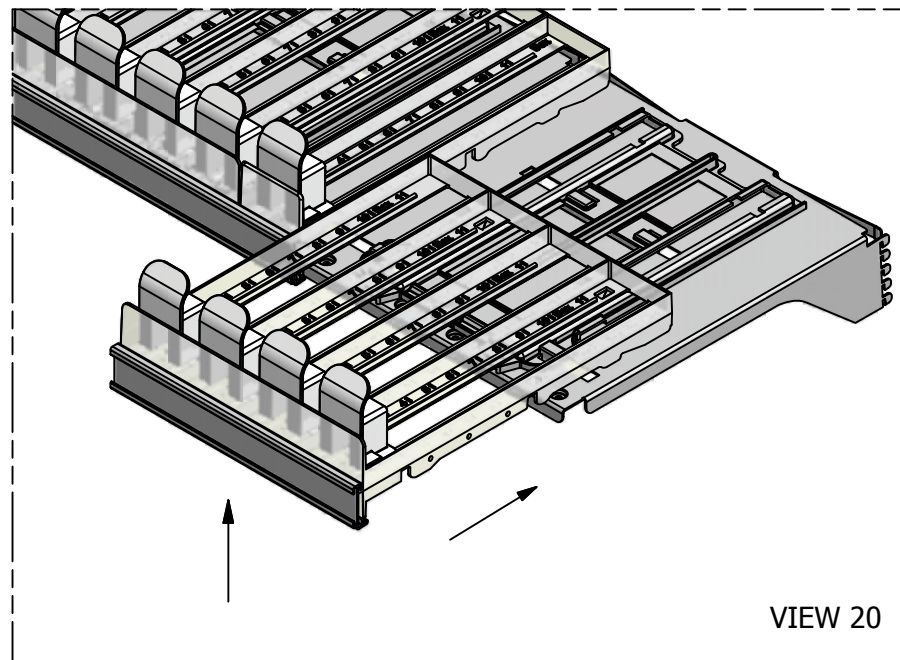

VIEW 20

LOADING PRODUCT INTO THE TOBACCO SPRING LOAD TRAYS

STEP 14 - PULL OUT THE FIRST TOBACCO SPRING LOAD TRAY AND LOWER THE FRONT END. SLIDE THE PADDLES TO THE BACK UNTIL THEY LOCK IN PLACE. (VIEW 19)

STEP 15 - LOAD PRODUCT INTO THE TOBACCO SPRING LOAD TRAY.

STEP 16 - LIFT THE PADDLES SLIGHTLY, ALLOWING THEM TO SLIDE FORWARD AGAINST THE PRODUCT. LIFT THE FRONT END OF THE TOBACCO SPRING LOAD TRAY AND GENTLY SLIDE IT BACK ONTO THE SHELF. (VIEW 20)

STEP 17 - REPEAT AS NEEDED FOR ADDITIONAL TOBACCO SPRING LOAD TRAYS.




STEP 18 - ALIGN THE FRONT EDGES OF THE TOBACCO SPRING LOAD TRAYS ALONG THE SHELVES WHEN DONE.

Flex Frame 2

TOBACCO FIXTURES - 2', 3', 4'

LOW PROFILE & STANDARD HEIGHT

INSTALLATION INSTRUCTIONS

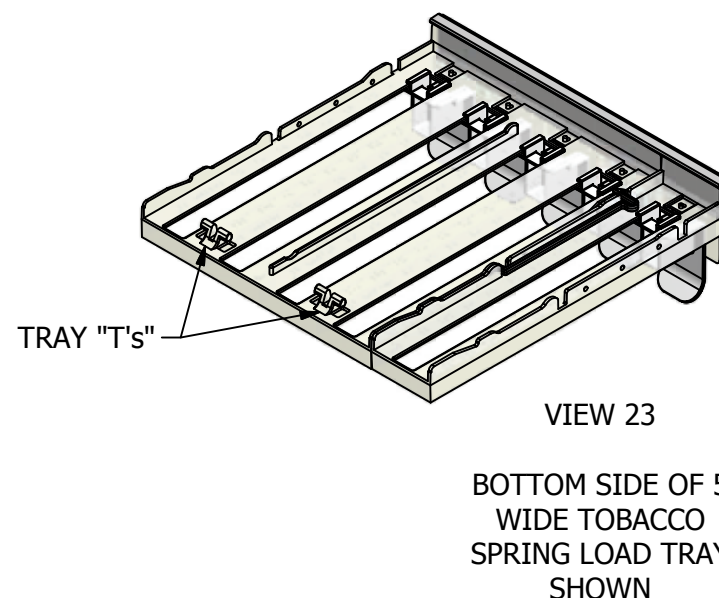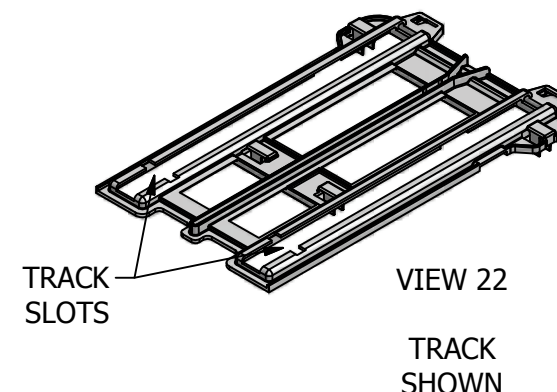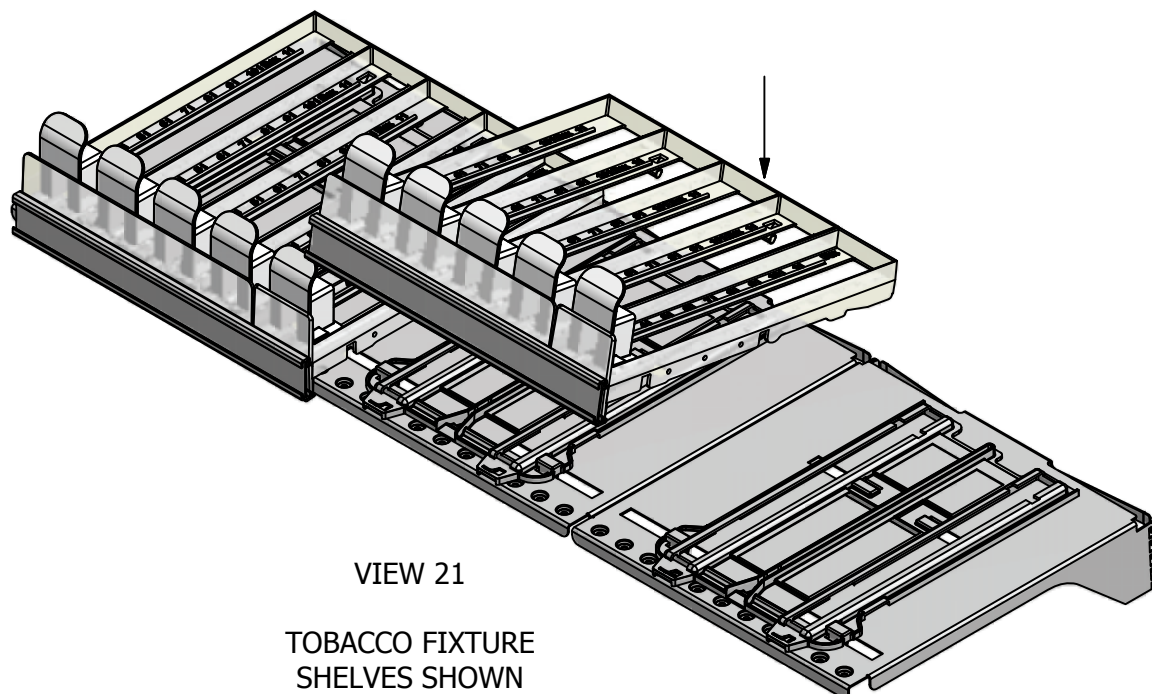


INSTALLING/REMOVING THE TOBACCO SPRING LOAD TRAYS

STEP 19 - TO INSTALL, ALIGN THE "T's" ON THE BOTTOM OF THE TOBACCO SPRING LOAD TRAY WITH THE SLOTS IN THE APPROPRIATE TRACK. (VIEW 22 AND VIEW 23)

STEP 20 - LOWER THE TOBACCO SPRING LOAD TRAY INTO PLACE, THEN PULL IT SLIGHTLY FORWARD TO MAKE SURE IT IS ENGAGED WITH THE TRACK AND IS SITTING PROPERLY ON THE SHELF. (VIEW 21)

NOTE - REVERSE STEPS 19 THROUGH 20 TO REMOVE A TOBACCO SPRING LOAD TRAY.

INSTALLATION INSTRUCTIONS

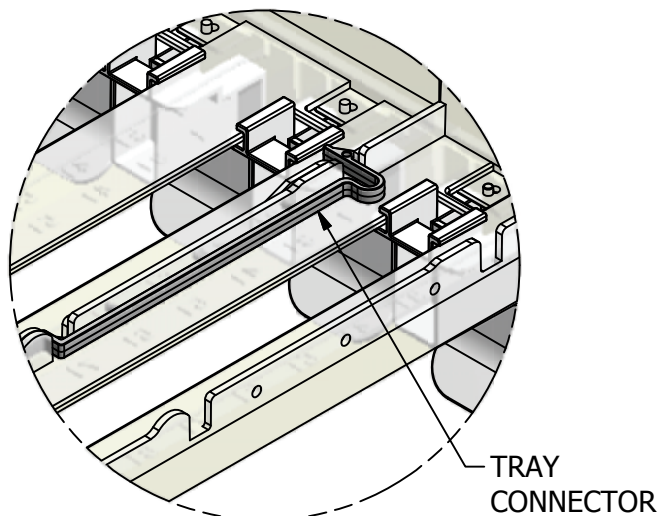

VIEW 24

UNDERSIDE OF 5 WIDE TOBACCO SPRING LOAD TRAY SHOWN

4 WIDE TOBACCO SPRING LOAD TRAY

5 WIDE TOBACCO SPRING LOAD TRAY SHOWN

SIGN CHANNEL

VIEW 25

1 WIDE TOBACCO SPRING LOAD TRAY


ASSEMBLY/DISASSEMBLY OF THE 5 WIDE TOBACCO SPRING LOAD TRAY

STEP 21 - TO ASSEMBLE, POSITION A 4 WIDE TOBACCO SPRING LOAD TRAY AND A 1 WIDE TOBACCO SPRING LOAD TRAY TOGETHER SIDE BY SIDE SO THAT THE HOLES AND NOTCHES ALIGN WITH EACH OTHER. (VIEW 25)

STEP 22 - CONNECT THE 2 PARTS TOGETHER USING THE TRAY CONNECTOR. (VIEW 24)

STEP 23 - HOOK THE SIGN CHANNEL ON TO THE FRONT OF THE ASSEMBLED TOBACCO SPRING LOAD TRAY AND SNAP IT INTO PLACE. (VIEW 24, VIEW 25, AND VIEW 26)


NOTE - REVERSE STEPS 21 THROUGH 23 TO DISASSEMBLE A 5 WIDE TOBACCO SPRING LOAD TRAY.

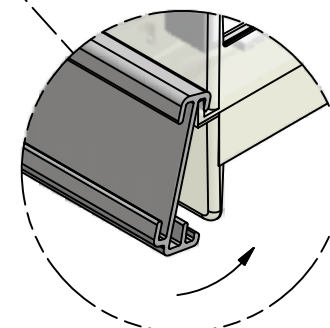

VIEW 26

CLEAN UP AND RECYCLING INFORMATION

STEP 24 - WHEN INSTALLATION IS COMPLETE
CLEAN UP THE AREA AND RECYCLE/DISCARD
THE PACKING MATERIAL.

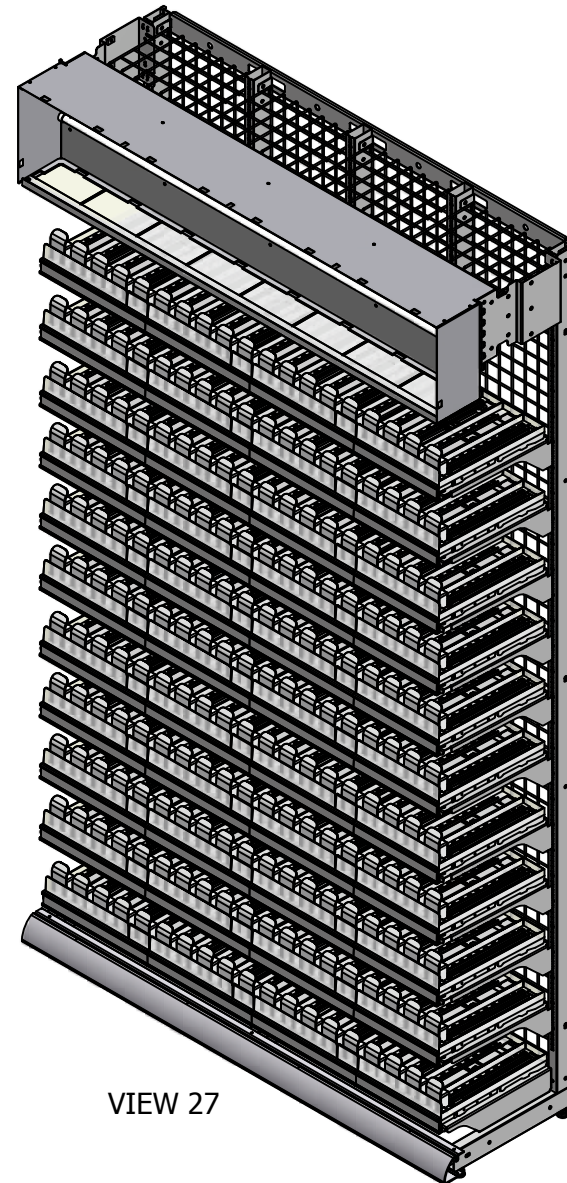

VIEW 27